


SHAD


BMW S 1000 XR '20- W0SX104P

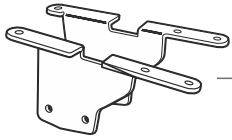

1 262659 x 1 →
262660 x 1 ←



2 303027 x 8
Ø8

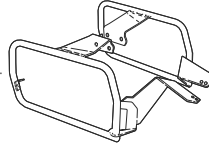

3 263072 x 1 →
263073 x 1 ←



4 303045 x 8
Ø8



5 304053 x 4
M8x30 DIN 7380




6 302024 x 4



7 260648 x 3
Ø16 Ø9 x 5



8 303020 x 4
Ø8



9 304039 x 4
M8x40 DIN 7380



10 263074 x 1



11 302021 x 2
M6



12 303017 x 4
Ø6



13 304052 x 2
M6x20 DIN 7380

WARNING! ⚠

GB Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

