


SHAD

YAMAHA MT03 '15- KIT TOP YOMT36ST

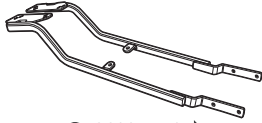

1 261953 x2



2 261954 x1 →
261955 x1 ←



3 303020 x8
Ø8



4 260648 x4
Ø16 Ø9 x 5



5 304069 x4
M8 x 55 DIN 7380



6 304081 x2
M8 x 20 DIN 7380



7 302024 x2
Ø8

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

